



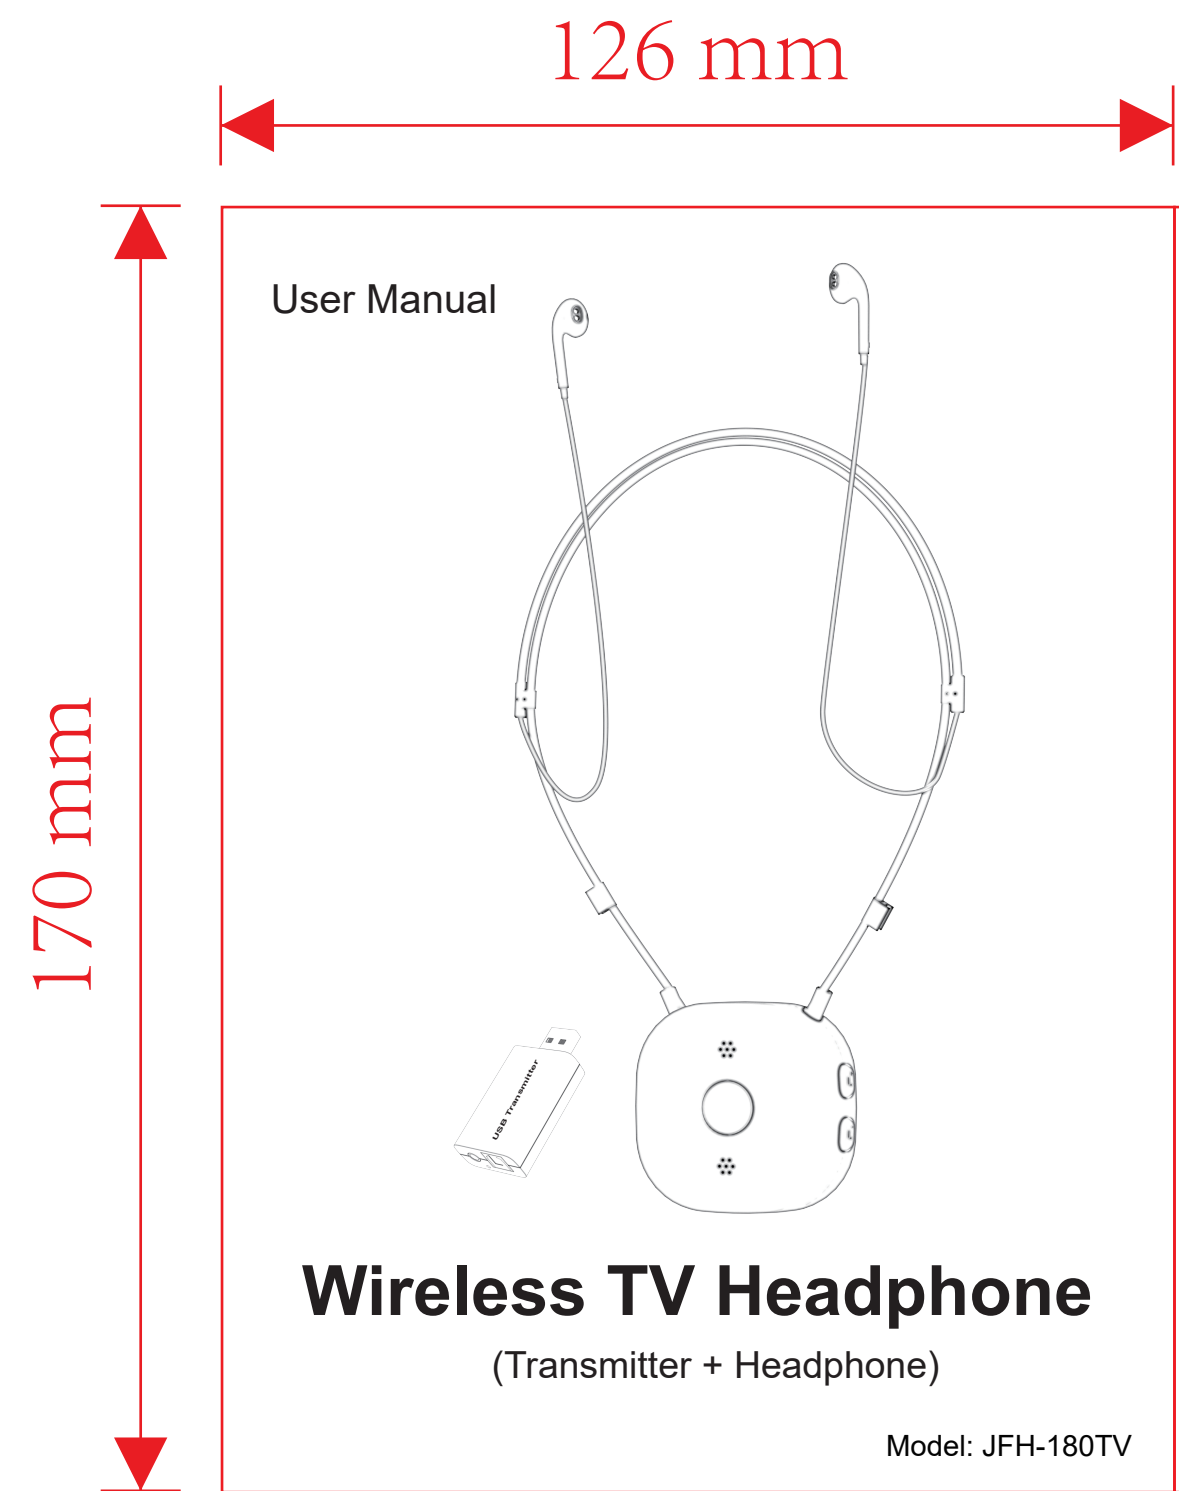

User Manual Wireless TV Headphone (Transmitter + Headphone) Model: JFH-180TV	Table of Contents 1. Accessories List 02 2. Product Parameters 02 3. TV USB/Optical/3.5mm/RCA Ports Connection Instructions 03 4. Product Button Instructions 04 5. Receiver Button Functions 05 6. Voice Prompt Sound /LED Indicator Light 06 7. Headphone Charging 07 8. Quick Start Guide for Connecting to TV 08 9. Diagram of TV Sound Settings 11-13	Accessories List 1. Headphone 2. USB Transmitter 3. Optical Cable 4. 3.5mm Audio Cable 5. RCA Audio Cable to 3.5mm Female Socket 6. Charging Cable	TV USB/Optical/3.5mm/RCA Ports Connection Instructions Note: Currently there are two functions of TV USB port in the market: ①5V power supply only ②5V power supply + audio output (Different brands of TVs have different USB functions, please refer to the TV manual).	Product Button Instructions Transmitter Receiver	Receiver Button Functions Tips: The left and right volume adjustment keys will give a volume level prompt each time they are pressed. Adjust to a suitable decibel level of volume. When you turn on the headphones next time, they will automatically recall the volume level used last time, no re-adjustment is needed.	Voice Prompt Sound /LED Indicator light
	01	02	03	04	05	06

Headphone Charging

2 Ways To Charge

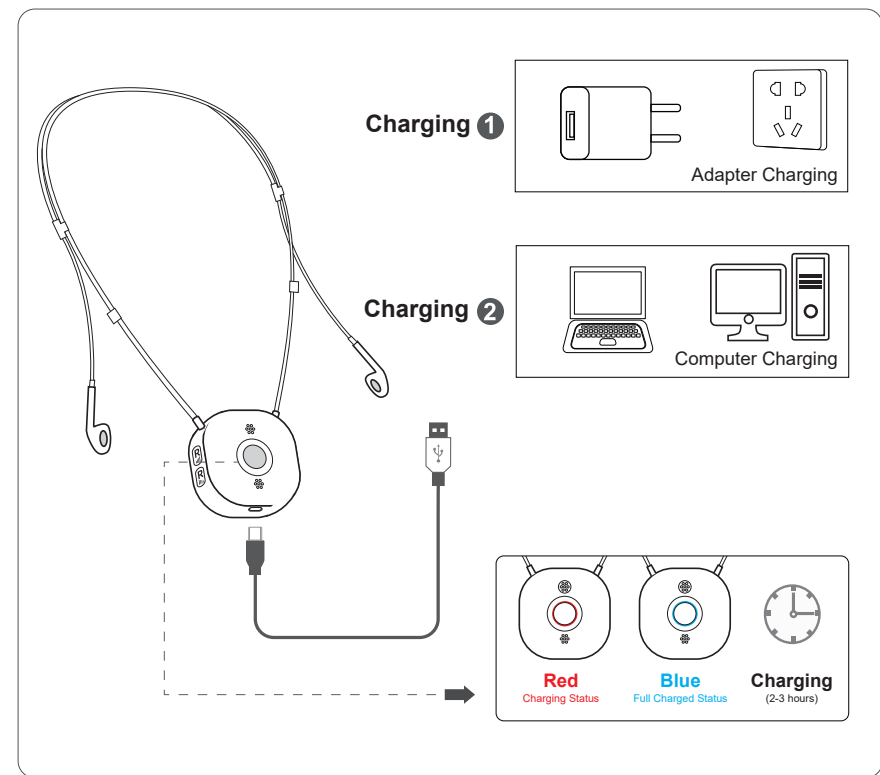


Note:
(1) Low battery of headphones: There is a "Battery Low" voice prompt, and the red light flashes slowly three times.
(2) Charging: The initial recommendation is more than 4 hours; normal charging takes 2 to 3 hours

Quick Start Guide for Connecting to the TV

USB Audio Output Port Connection


1. Insert the transmitter into the USB audio output port of the TV. The indicator light of the transmitter — the red light and the blue light alternate flashing - indicates that it is waiting to be connected to the receiver.
2. Receiver (Power On/Off Button): Press and hold for 3 seconds to turn on — The red light and blue light will alternate flashing, waiting to connect with the transmitter.
3. Automatic connection between receiver and transmitter: The blue light of the transmitter slowly flashes, the blue light of the headphone slowly flashes, and the connection is successful within 5 seconds.

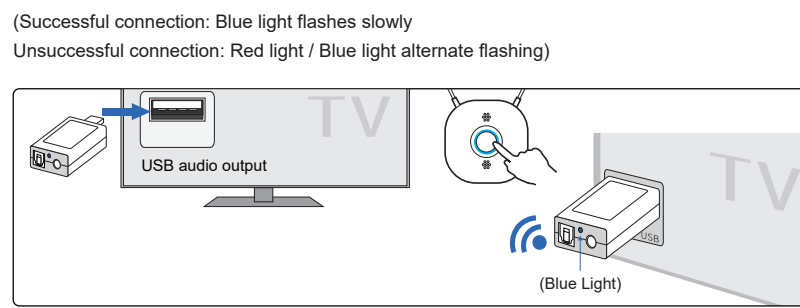

Note:
1. The TV must have the function of USB audio output.
2. If the receiver does not produce sound, please make sure that the USB port of the TV is set to the audio output mode.

Optical (TOSLINK) Connection


1. Remove the protective cover from the optical fiber cable. Insert one end of the optical fiber cable into the optical port of the TV, and the other end into the optical port of the transmitter.
2. Receiver (Power On/Off Button): Press and hold for 3 seconds to turn on — The red light and blue light will alternate flashing, waiting to connect with the transmitter.
3. Automatic connection between receiver and transmitter: The green light of the transmitter slowly flashes, the blue light of the headphone slowly flashes, and the connection is successful within 5 seconds.

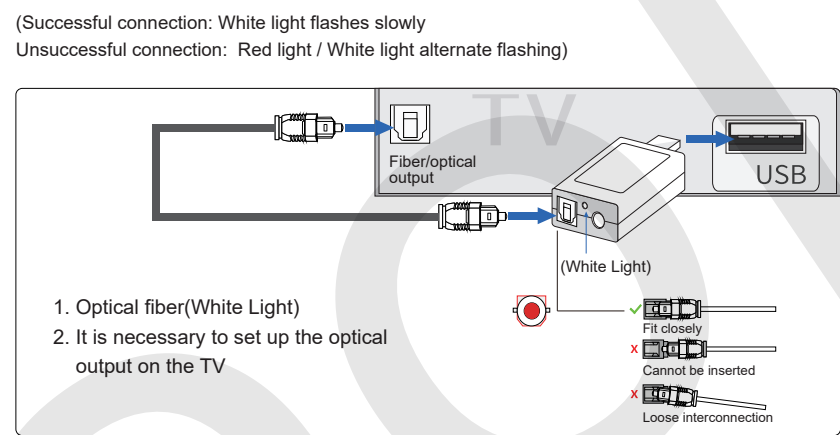

Note: If there is no sound from the headphone, make sure the TV's sound output/speakers are set to "External Speakers" or "Optical Audio Out".
Make sure the TV audio format/digital audio output setting is set to "PCM/Stereo".
TV operation is as follows: Use the TV remote control to press the "Settings" button and find "Sound Settings" in the menu.
TV Setting Path: Device Home → System Settings → Sound Settings → S/PDIF / Optical Audio Out/Digital Audio Out → PCMLPCM.
Note: Depending on the TV brand, the name of the sound menu setting will be different.

3.5mm Audio Output Connection

1. The 3.5mm audio cable is inserted into the 3.5mm audio output port of the TV at one end, and into the 3.5mm port of the transmitter at the other end.
2. Receiver (Power On/Off Button): Press and hold for 3 seconds to turn on — The red and blue lights alternate flashing, waiting to connect with the transmitter.
3. Automatic connection between receiver and transmitter: The green light of the transmitter slowly flashes, the blue light of the headphone slowly flashes, and the connection is successful within 5 seconds.

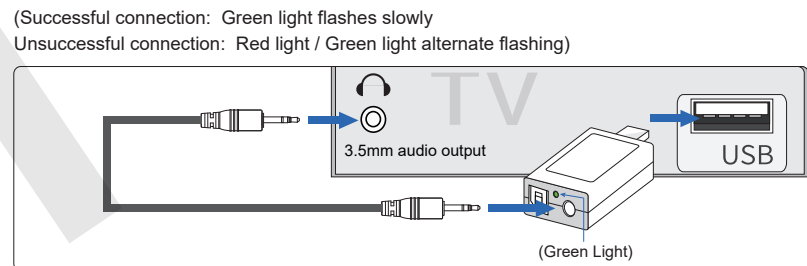

RCA Audio Output + 3.5mm Audio Cable Connection

1. Insert the two red/white terminals of the RCA audio cable into the corresponding RCA audio output ports of the TV. For the 3.5mm audio cable, insert one end into the adapter socket of the RCA audio cable and the other end into the 3.5mm port of the transmitter. (See the illustration below.)
2. Receiver (Power On/Off Button): Press and hold for 3 seconds to turn on - The red light and blue light will alternate flashing, waiting to connect with the transmitter.
3. Automatic connection between receiver and transmitter: The green light of the transmitter slowly flashes, the blue light of the headphone slowly flashes, and the connection is successful within 5 seconds.

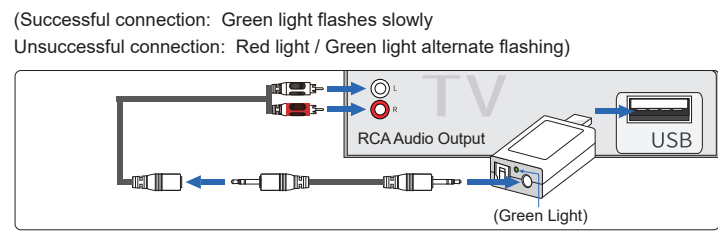


Diagram of TV Sound Settings

Note: The following lists the common sound output methods of some TVs. If your TV brand is not included here, please refer to your TV's user manual for detailed instructions.

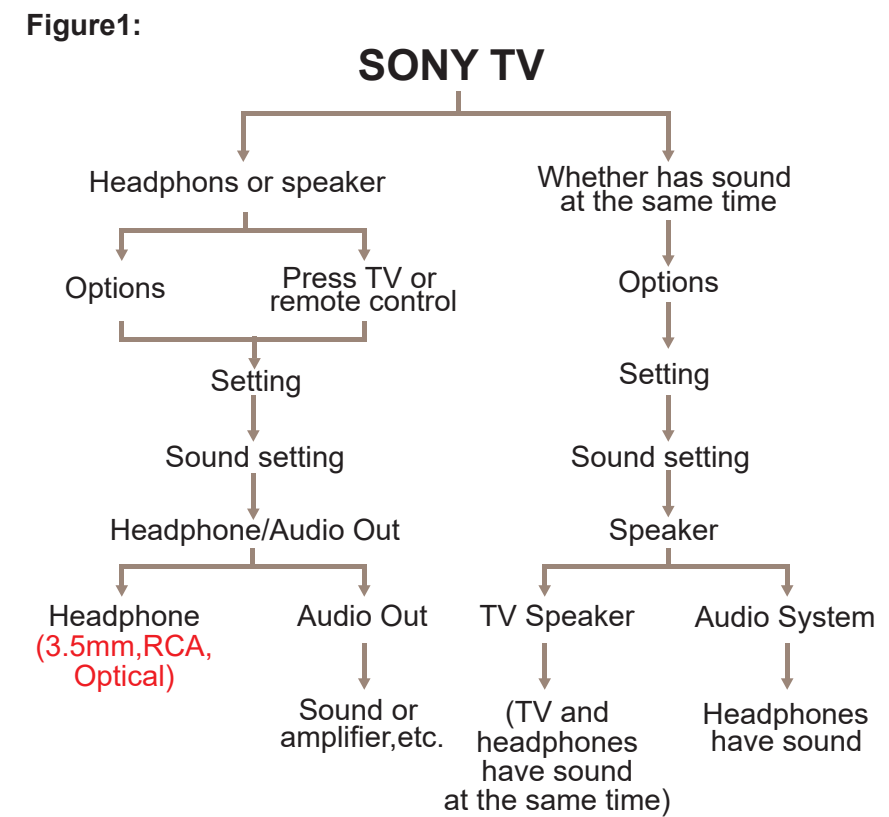


Figure2: SAMSUNG TV

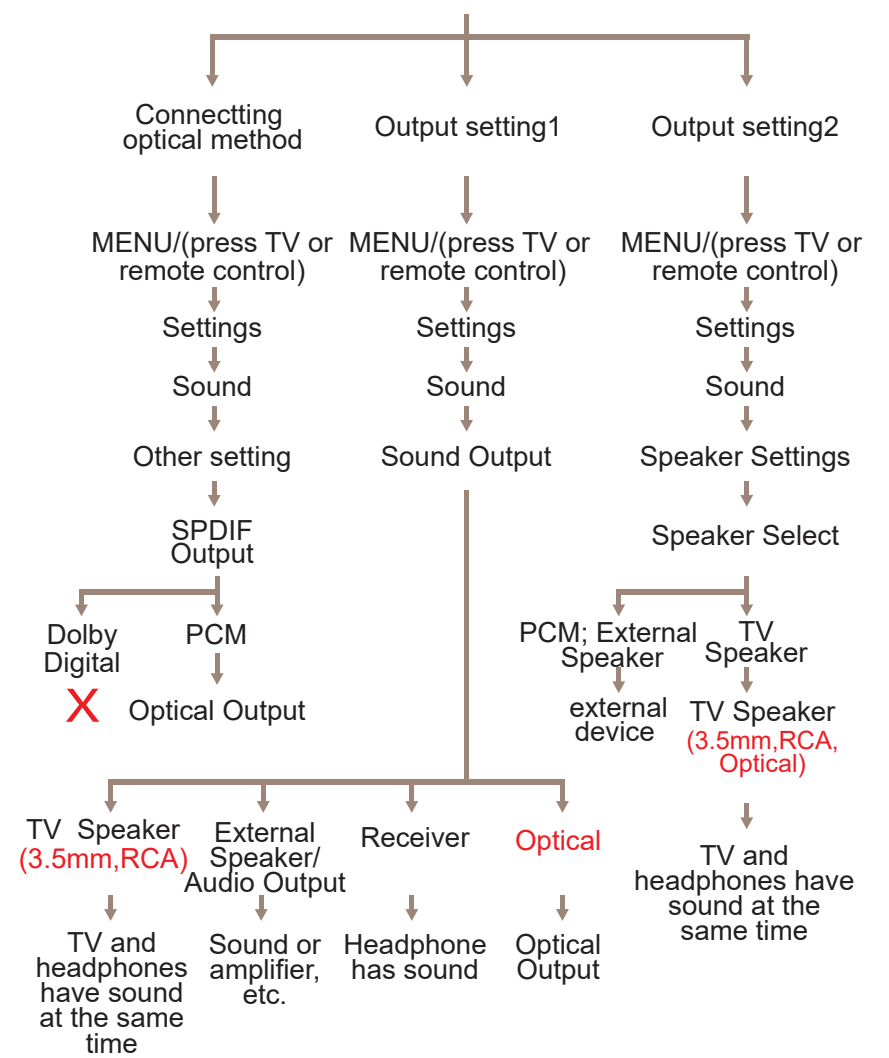


Figure3:

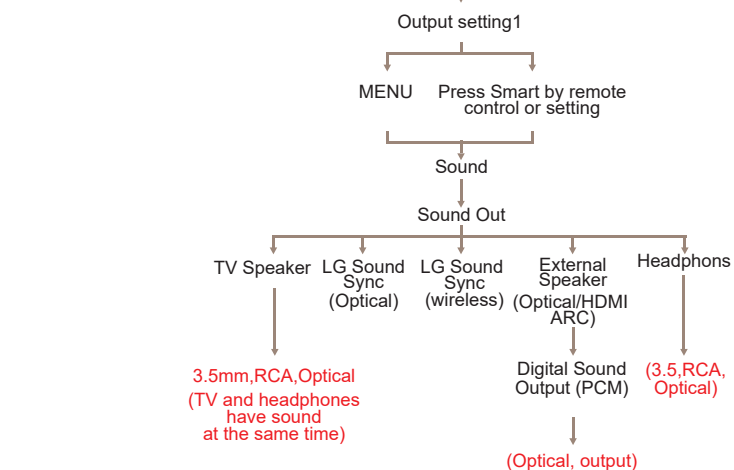


Figure4:

