

Memory Learning Headphones

Learning-880



User Manual

Contents

Product Parameters / Package List-----	03
Product Button Diagram / Indicator Light Description-----	04
Product Button Function-----	05
Headphones Charging Method / TF Card Data Transfer Method:-----	06
Mode 1: Turning the Sidetone Function On/Off in Bluetooth Mode----	07
Mode 2: Turning the Sidetone Function On/Off in TF Card Mode-----	07
Main Features of the Headphones / Notes / Warranty Policy-----	08

Product Parameters

Bluetooth Version:	5.3
Bluetooth Range:	10 m
Driver Size:	40mm
Driver Impedance:	32Ω
Maximum Sound Pressure Level (SPL):	85dB±3dB
Frequency Response Range:	20Hz-20KHz
Battery Capacity	500mAh
Charging Interface	Type-C
Charging Time	2 hours
Battery Life:	approximately 20 hours
Supported Profiles:	A2DP/AVRCP/HFP/HSP/OPP/HID/SPP/PBAP/GATT/SM

Audio Decoding Format:mp3 .wma .wav .flac .ape .m4a .aac

Package List



Memory Learning Headphones × 1



Storage Pouch × 1




USB Type-C Data Cable × 1



Cleaning Cloth × 1

Product Button Diagram

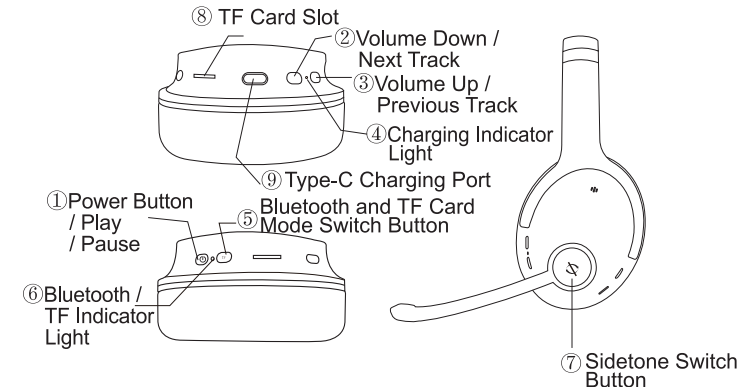

Indicator Lights Description

Bluetooth Indicator	Red and blue lights flash alternately; after successful connection, the blue light flashes slowly.
TF Card Indicator Light	Green light flashes slowly.
Charging Indicator	Red light stays on during charging; blue light stays on when fully charged.
Low Battery Indicator	Red light flashes rapidly twice every 10 seconds.
Sidetone Indicator Light	Red/Blue lights flicker
On/Off	Red/Blue lights flicker / Red light normally on
Clear Bluetooth Pairing Indicator Light	Red/Blue lights flicker

Button Functions


Name of Button	Operating Mode	Corresponding Function
① Power Button / Play / Pause	Press and hold the Power Button for 3 s	On/Off
	/	Bluetooth not connected.With Sidetone Off, auto Powe Off after 15 min
	Single press the Power Button	Call answering
	Single press the Power Button	End the telephone call
	Single press the Power Button	Play Music
	Single press the Power Button	Pause music
	Double-press the Power button	Reject the call
② Volume Down / Next Track	Long press for 2 seconds	Switch to Next Track
	Short-press	(Sidetone, Bluetooth, TF Card Mode) Volume Down
③ Volume Up / Previous Track	Long press for 2 seconds	Switch to Previous Track
	Short-press	(Sidetone, Bluetooth, TF Card Mode) Volume Up
④ Charging Indicator Light	/	Red light stays on during charging; blue light stays on when fully charged.
⑤Bluetooth and TF Card Mode Switch Button	Short-press	Mode Switch Bluetooth / TF Card
⑥ Bluetooth Indicator Light TF indicator light	/	Red and blue lights flicker; after connected successfully, blue light flashes slowly.
	/	Green light flashes slowly.
⑦ Sidetone switch	Short-press	Power Key
⑧ TF Card Slot	Insert / Remove	Storage
⑨ Type-C charging port	/	Type-C charging

Voice Prompt Notes


Power On	Power On
Power Off	Power Off
Connected Successfully	Bluetooth connected successfully.
Disconnected	Bluetooth disconnected
Maximum V olume Alert	Maximum volume reached, please protect your hearing
Bluetooth TF Card ModeMin Volume Alert	Beep
Low Battery Alert	Battery level low, please charge. Alert once every 3 minutes
Sidetone Switch Voice Prompt	Sidetone On / Sidetone Off
TF Card / Bluetooth Switch Voice Prompt	TF Card Mode Bluetooth Mode
Power On Usage Time Reminder	You have been using the headphones for 30 minutes, please take a break; you have been using the headphones for 60 minutes, please take a break. You have used for 2 hours, please take a break

Headphones Charging Method / TF Card Data Transfer Method:

1. The headphones are charged by connecting a Type-C data cable to a power adapter. During charging, the indicator shows a solid red light; when fully charged, it shows a solid blue light. When the battery is low, the red light flashes rapidly twice every 10 seconds, and a voice prompt "Low battery, please charge" will play every 3 minutes.

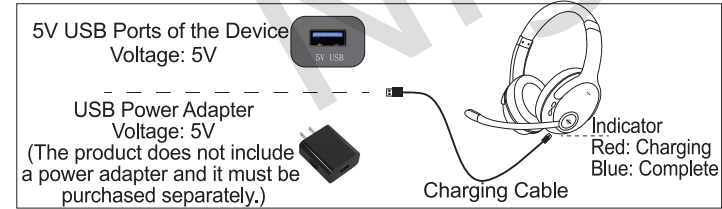

2. Connect the headphones to a computer via a Type-C data cable to upload or download audio files to the TF card (NOTE: Please use a Type-C cable with data transfer functionality,not a charging-only cable). The TF card is not included and must be purchased separately.

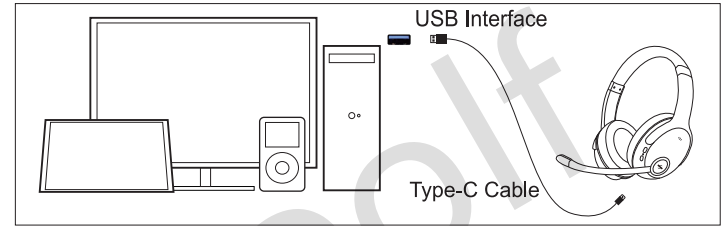

Mode 1: Turning the Sidetone Function On/Off in Bluetooth Mode

1. Press and hold No.① Power Button for 3 seconds to Power On the headphones. A voice prompt "Bluetooth Mode" will be heard. Connect to computers, mobile phones, and other mobile audio devices via the Bluetooth pairing name "Learning-880".

2. The Sidetone function is on by default. Single-press the ⑦ Sidetone Buttonto turn it off; the voice prompt "Ear-return Off" will play. The headphones will play audio from computers, mobile phones, and tablets via Bluetooth.Use the ② and ③ buttons to adjust the volume and track playback order. (Note: When using the headphones for calls, the Sidetone function must be turned on.)

3. Single-press the ⑦Sidetone Button to turn on the Sidetone function; the voice prompt "Ear-return On" will play. When you read or speak, your voice will be fed back immediately, forming a closed-loop listening-speaking feedback. If the headphones are simultaneously playing audio from a device, you can practice pronunciation and read along synchronously.

Mode 2: Turning the Sidetone Function On/Off in TF Card Mode

1. Press and hold No.① Power Button for 3 seconds to Power On the headphones. A voice prompt "Bluetooth Mode" will be heard, then single press No.⑤ TF Card Mode Switch Button. A voice prompt "TF Card Mode" will be heard.

2. The Sidetone function is on by default. The headphones will automatically play audio files stored on the TF card (e.g., online course texts or songs). Use the ② and ③ buttons to adjust the volume and track playback order. Loop playback is supported.

3. When the Sidetone Function is On, when you read or speak, your voice will be fed back immediately, forming a closed-loop listening-speaking feedback. If the TF Card is simultaneously playing audio content stored on the card, you can perform pronunciation training and synchronized read-along at the same time. Single press button ⑦ Sidetone Toggle Button again to turn off the Sidetone Function. Voice Prompt:"Ear-return Off" .

Main Features

- Supports Sidetone, enhancing language ability
- Listen while reading to strengthen memory
- Bluetooth mode and memory mode, easy mode switching with no delay
- Sound pressure protection design safeguards the hearing health of minors

Precautions for Use

1. Please read this user manual carefully before using the product and keep it properly.
2. Do not disassemble or modify the product by yourself.
3. If the device is not used for a long time, it is recommended to charge the device at least once every 3 months.
4. To protect your hearing, do not listen to audio at high sound levels for a long time. (When the headphones are used for more than 30 minutes / 60 minutes / 2 hours, the voice prompt "Please take a break" will appear in sequence.)
5. Please do not use the device in high-temperature, humid, or dusty environments.
6. During use, avoid dropping the device or colliding it with hard objects, as this may cause damage to the device.
7. Do not allow water or other liquids to enter the inside of the product to prevent damage.

Product Warranty Policy

1. The company provides a one-year free warranty from the date of purchase.
2. Damage caused by human factors or abnormal external condition is not covered by the free warranty.
3. If you encounter product quality problems, please contact the company immediately and do not disassemble it by yourself.

